



**RNAV STANDARD DEPARTURE CHART - INSTRUMENT  
(SID) - ICAO**

**KARLOVY VARY  
RNAV SID RWY 11**

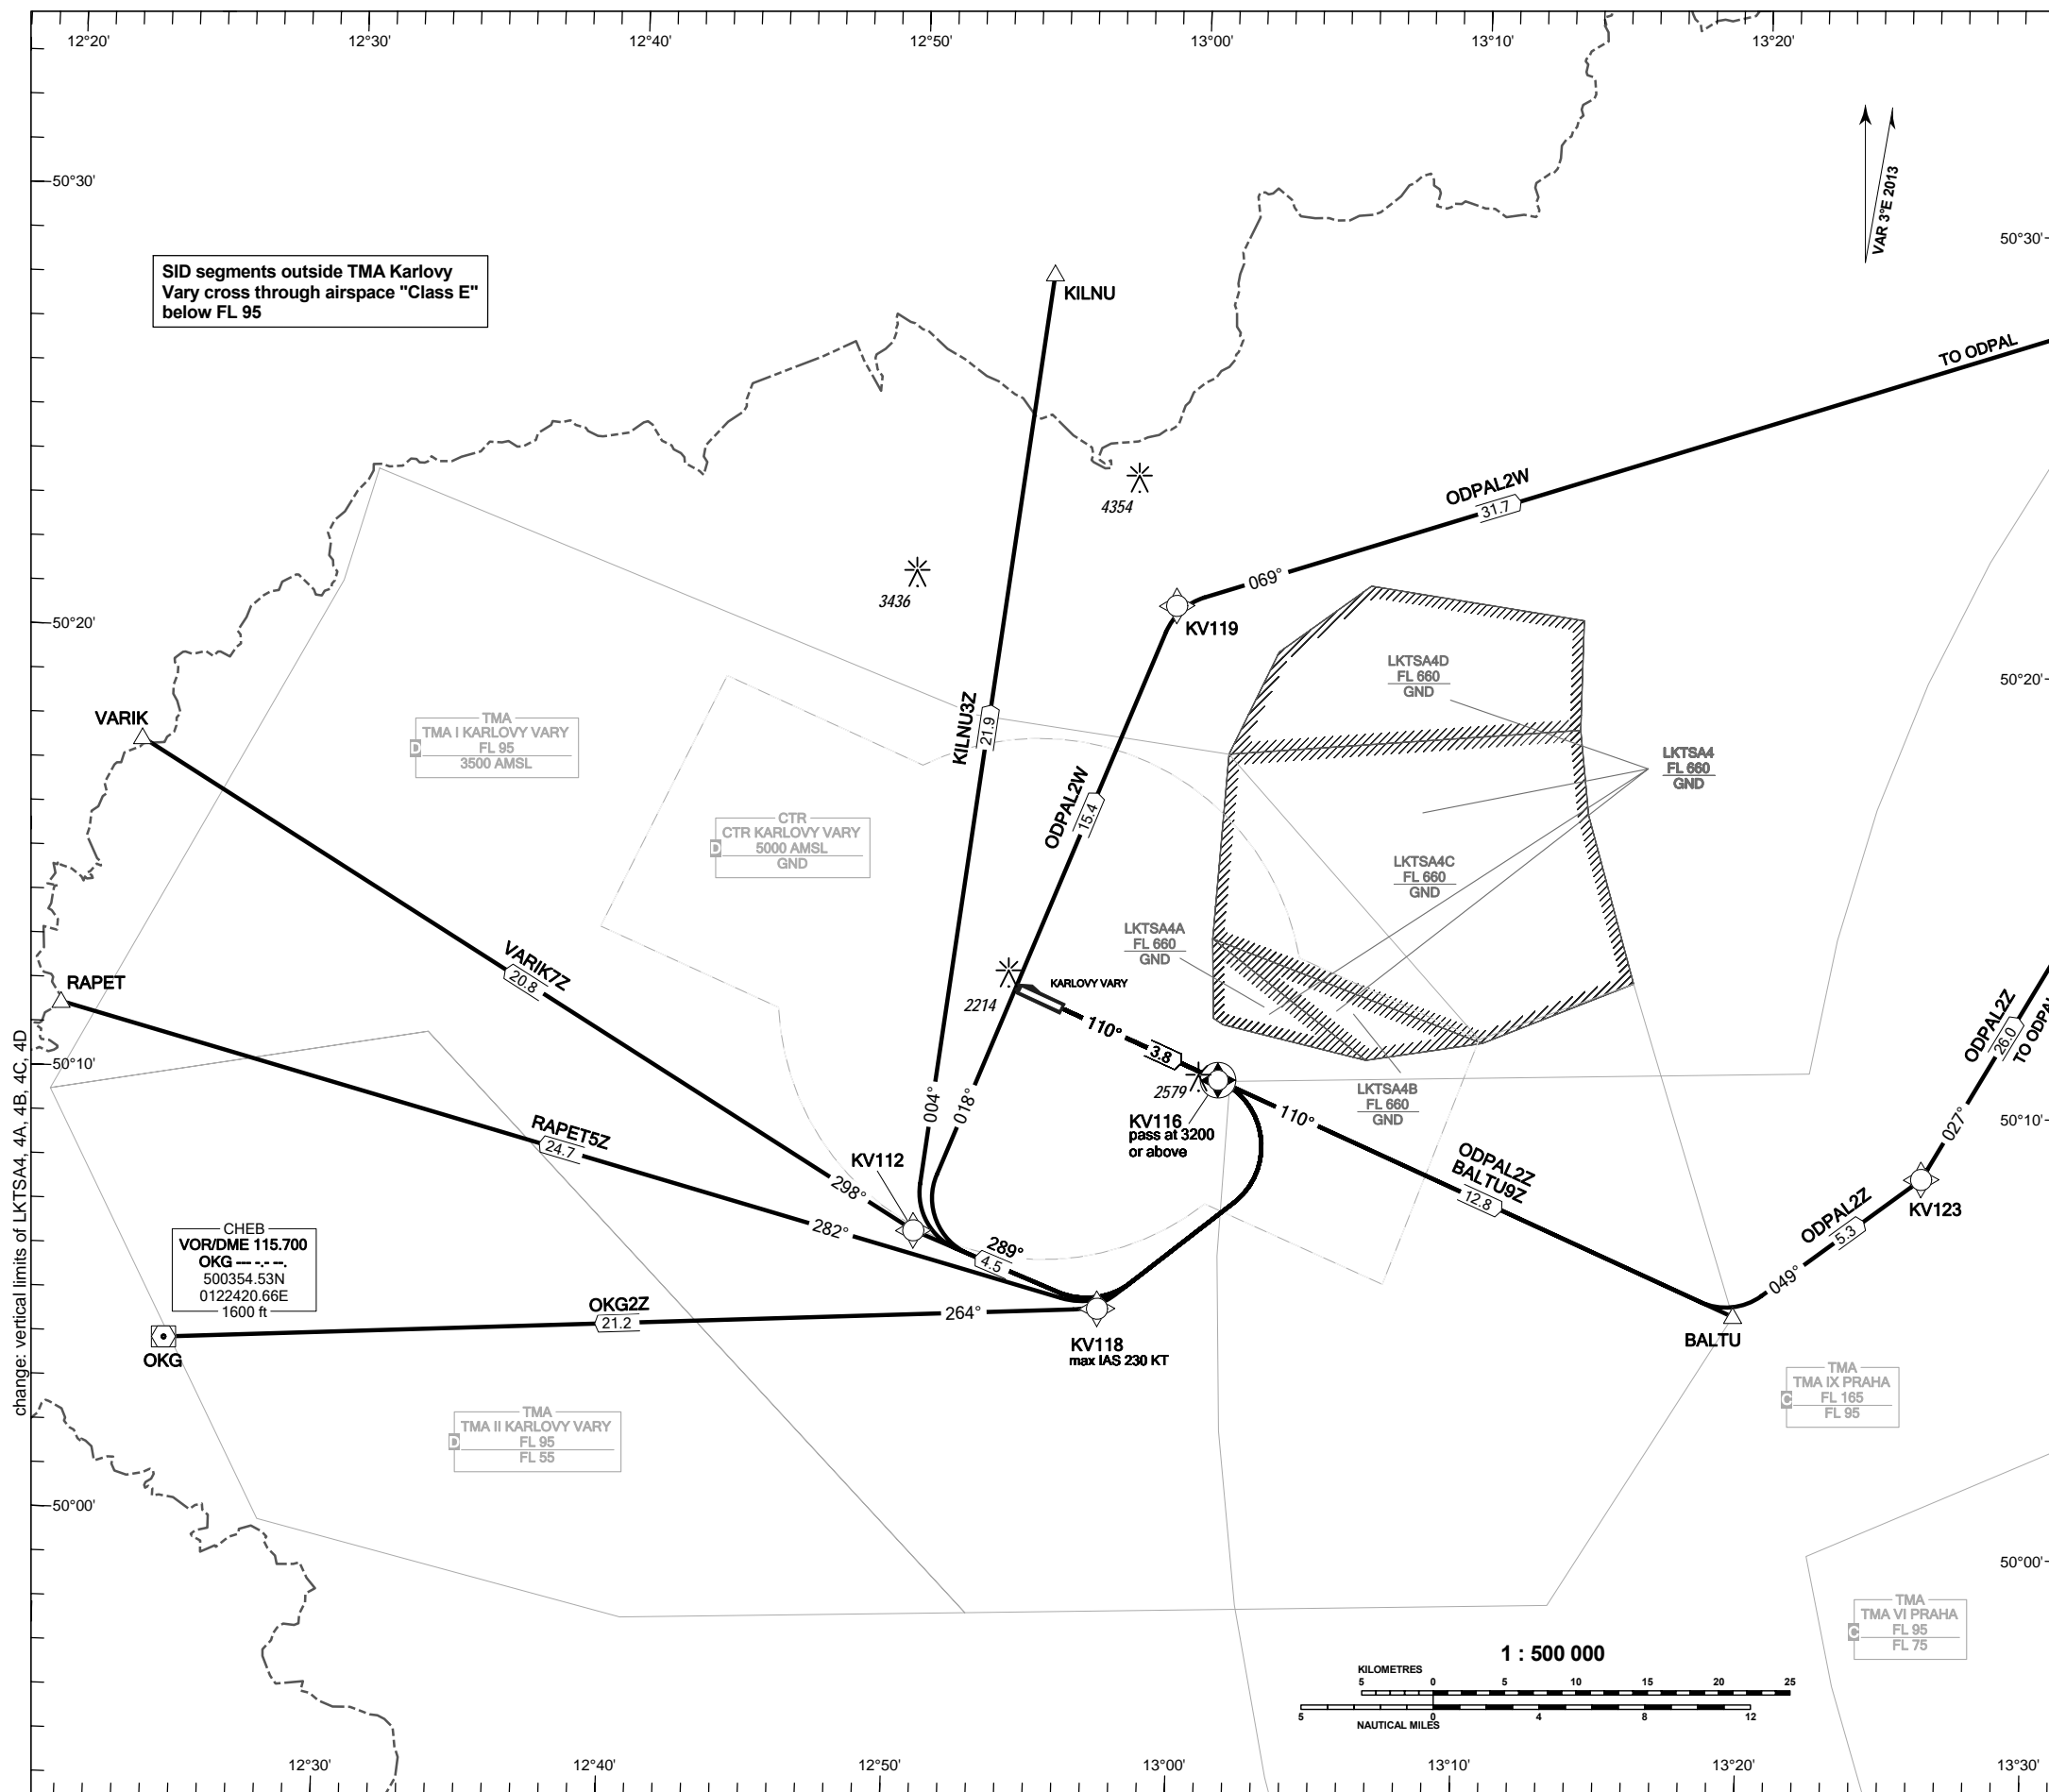

|                               |         |
|-------------------------------|---------|
| KARLOVY VARY APPROACH / RADAR | 118.650 |
| KARLOVY VARY TOWER            | 119.955 |
| SUPPLEMENTARY FREQ TWR        | 121.230 |
| KARLOVY VARY ATIS             | 122.905 |
| EMERGENCY FREQ                | 118.955 |
|                               | 121.500 |

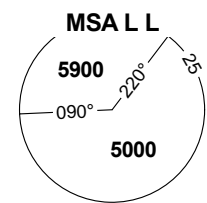

TRANSITION ALTITUDE  
5000

BEARINGS, TRACKS AND RADIALS ARE MAGNETIC  
ALTITUDES AND ELEVATIONS ARE IN FEET  
DISTANCES ARE IN NM