


**RNAV STANDARD DEPARTURE CHART -
INSTRUMENT (SID) - ICAO**

**PRAHA/RUZYŇĚ
RNAV SID RWY 12**

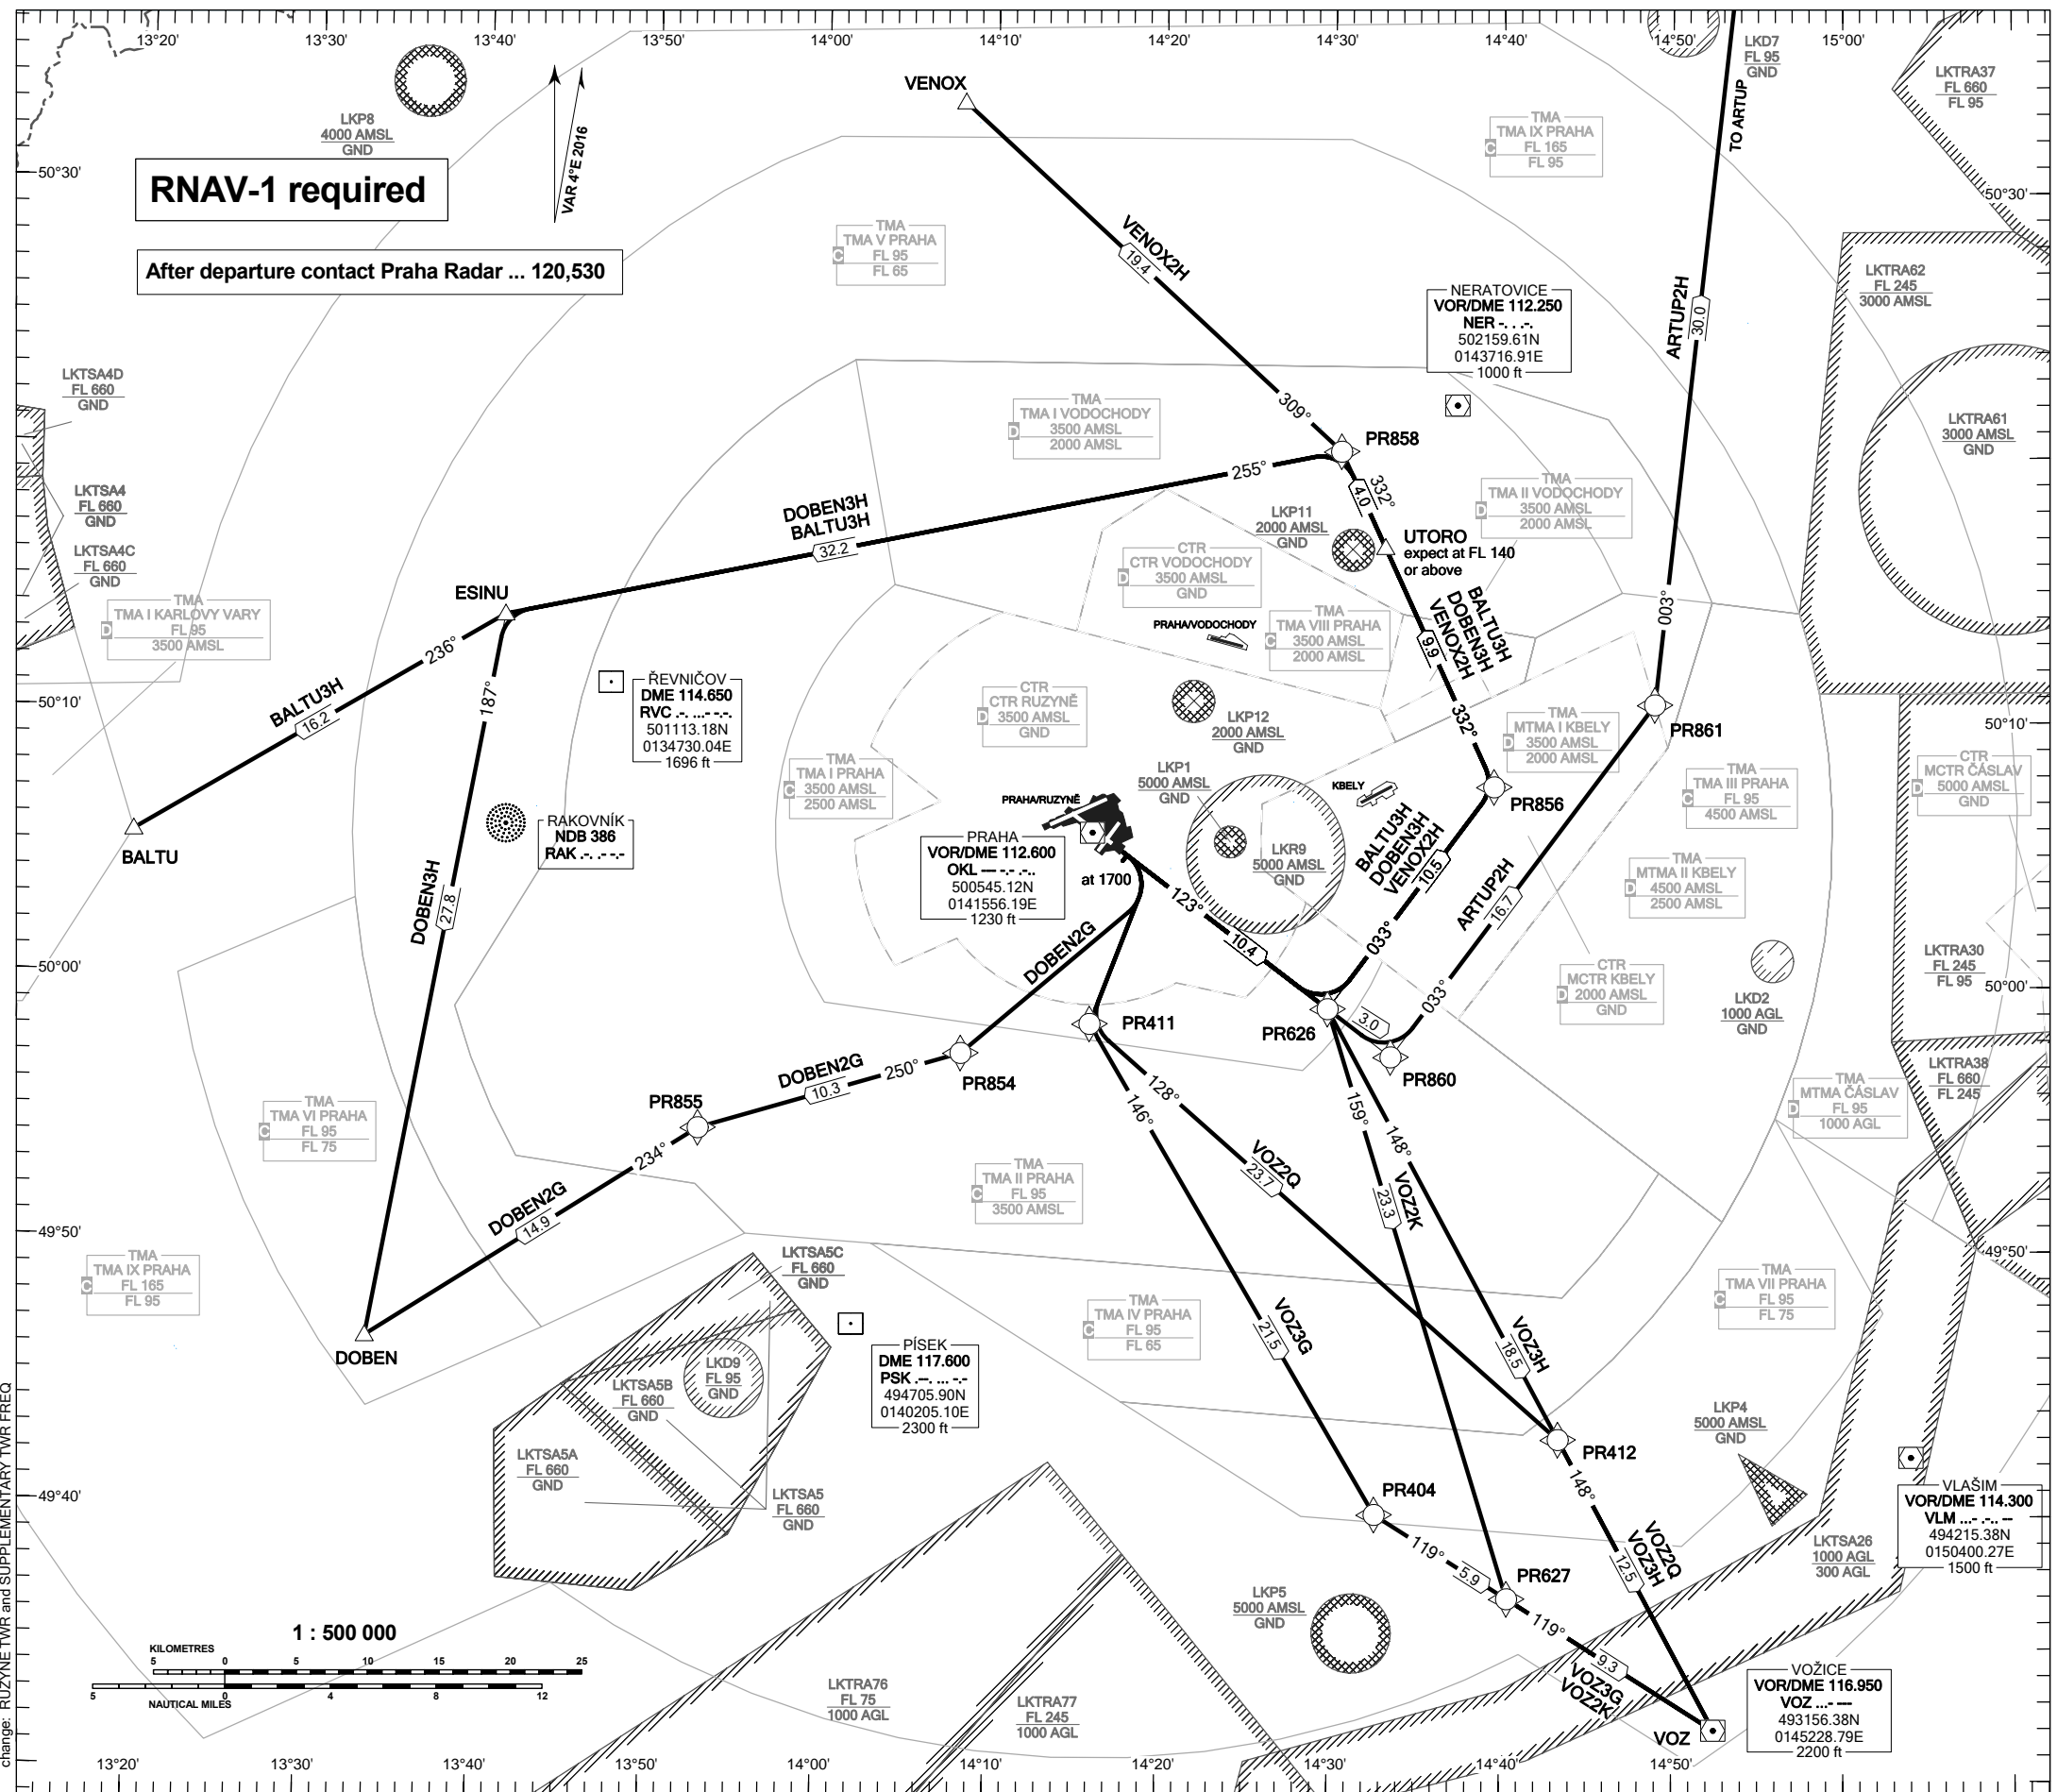


RNAV-1 required
After departure contact Praha Radar ... 120,530

VOZ 2Q
Only for propeller driven aircraft between 0500 - 2100 (0400 - 2000) UTC when RWY 24 is in use.

VOZ 2K
Only for propeller driven aircraft between 0500 - 2100 (0400 - 2000) UTC when RWY 06 is in use.

PRAHA APPROACH / RADAR	120.530
RUZYŇĚ APPROACH / RADAR	127.580
RUZYŇĚ RADAR / INFORMATION	119.010
SUPPLEMENTARY FREQ APP	118.310
RUZYŇĚ DELIVERY	136.080
RUZYŇĚ TOWER	120.060
SUPPLEMENTARY FREQ TWR	134.560
RUZYŇĚ GROUND	118.110
RUZYŇĚ ATIS	121.910
EMERGENCY FREQ	122.160
	121.500

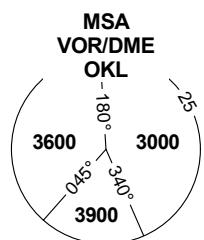

TRANSITION ALTITUDE
5000

DEPARTURE SPEED LIMIT BELOW FL 100	
JETS	MAX IAS 250 KT
PROPS	MAX IAS 180 KT

see AIP AD 2-LKPR-33, 2.22.4.3.5

BEARINGS, TRACKS AND RADIALS ARE MAGNETIC
ALTITUDES AND ELEVATIONS ARE IN FEET
DISTANCES ARE IN NM